

W2430,W2730,W3030,W3330,W3630
W2442,W2742,W3042,W3342,W3642

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel







STEP 4: Attach frame on

 



 
 
 
STEP 5: Put on the adjustable shelves

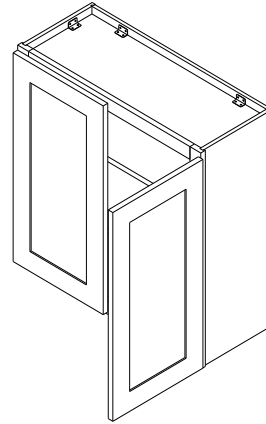STEP 6: Fix door onto the frame and adjust the cover-space

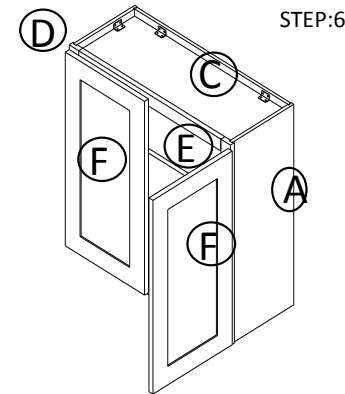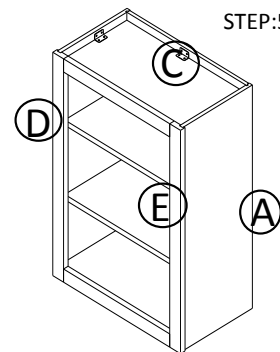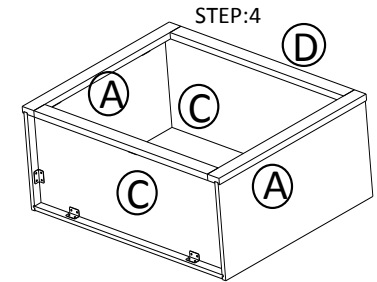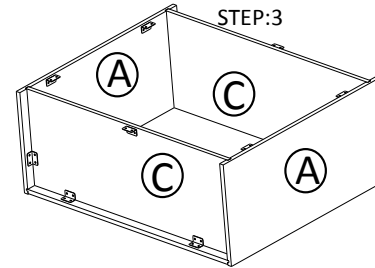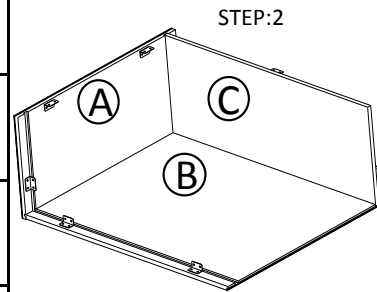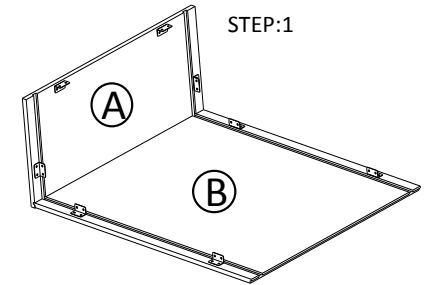

PARTS LIST		
NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP&BOTTOM PANEL	2
D	FACE FRAME	1
E	ADJUSTABLE SHELF	2 OR 3
F	CABINETS DOOR	2



7	1/2" HINGE	4	
6	3/4" ROUND HEAD SCREW	4	
5	BUMPER	4	
4	SHELF CLIP	8	
3	9/16" ROUND HEAD SCREW	56	
2	CLEAT	14	
1	1" FLAT HEAD SCREW FOR CARCASS	6	
NO.	Description	QTY	PICTURE

HARDWARE LIST