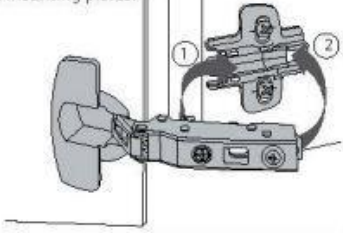
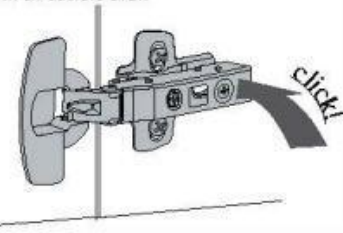
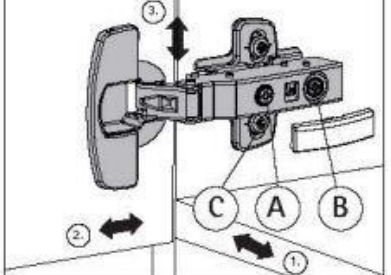
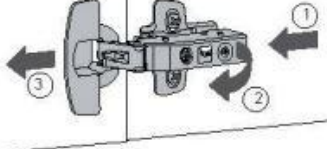
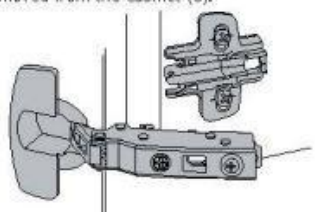


Euro Hinge Instructions

<p>1 Assembly First, slide all the hinges, from the front, onto the mounting plates.</p> 	<p>2 Then press lightly on each successive hinge until the arm latches onto the mounting plate with an audible click!</p> 	<p>i Remove cover cap for hinge adjustment</p>  <p>Adjustment 1. Overlay adjustment: + 2 / - 2 mm Turn screw (A) clockwise: Door overlay decreases (-). Turn screw (A) anticlockwise: Door overlay increases (+). 2. Depth adjustment: + 3 / - 2 mm Direct, infinitely variable depth adjustment by turning the screw (B). 3. Height adjustment: + 2 / - 2 mm Loosen fixing screws (C) slightly and adjust height of door. Then tighten fixingscrews again.</p>
<p>3 Disassembly It is carried out in the opposite direction from bottom to top. The hinge is unlatched by pressing lightly on latch (1) which is hidden under the side arm.</p> 	<p>4 In one movement, the hinge arm is lifted off the mounting plate (2) and the door is removed from the cabinet (3).</p> 	

Technische Änderungen vorbehalten.
Keine Gewährleistung für Druckfehler und Irrtümer.

Subject to technical alterations.
Errors and omissions excepted.

Sous réserve de modifications techniques.
Notre responsabilité ne sera engagée en cas de fautes de frappe ou d'erreurs.

Salvo modifiche tecniche.
Nessuna garanzia per errori di stampa ed errori.

Se reserva el derecho a realizar modificaciones técnicas. No ofrecemos garantía alguna respecto a eventuales errores de impresión u otros errores.

Technische wijzigingen voorbehouden.
Wij zijn niet verantwoordelijk voor drukfouten of andere vergissingen.

The door hinges do not use screws to hold them in place. The hinge will lock into place when inserted into the cup on the door and the cover is closed.

