
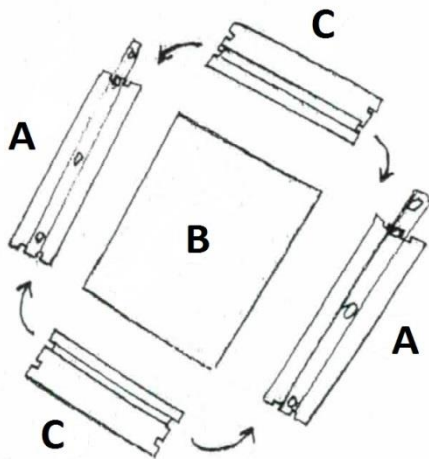
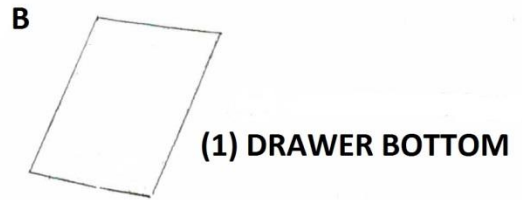


Roll Out Tray Instructions for Glazed Burnished Cherry, Glazed Praline, Shaker Cabernet, Rustic Hickory, Biscotti Café, Camden Coffee, Camden Cherry, & Vintage White Finishes

Parts Included:

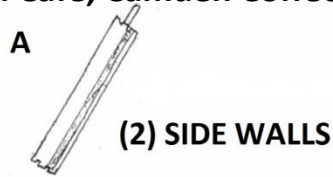



Assembly:

Align parts (A) & (C) around the drawer bottom (B) and gently tap pieces together at dovetails with a rubber mallet. Slide the drawer bottom into the dado grooves before attaching the last front or back panel (C).

Installation:

- 1) First, measure up to desired height of drawer on cabinet back panel and mark it with a pencil.
- 2) Next, attach the 5/8" shim at the same height along the inside of the frame between the door hinges (if it's a single door cabinet, there will only be 1 shim, double door cabinets will have 2 shims)

- 3) For mounting brackets, measure in 2 1/8" from the cabinet side on the hinge side and 1 1/2" from the side with no hinges. Mark with a pencil across previously drawn line.
- 4) Once the brackets are mounted, slide the drawer slides into place attaching them to the frame at the same height as the brackets.

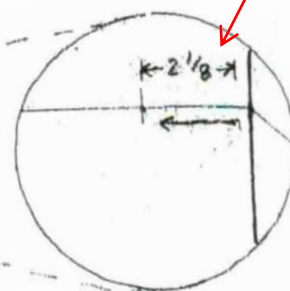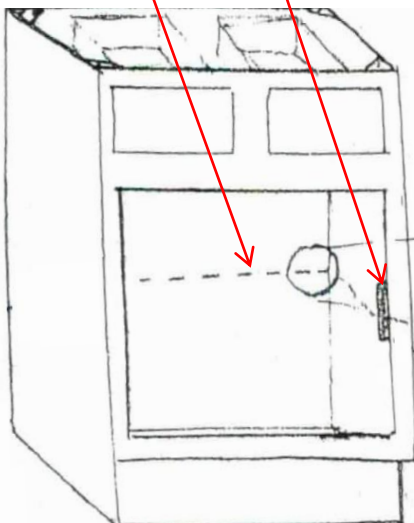

These marks will be where the center holes of the brackets line up.

