


Assembly Instructions for Wall Corner Cabinet with Bi-Fold Door





ASSEMBLE CABINET BOX

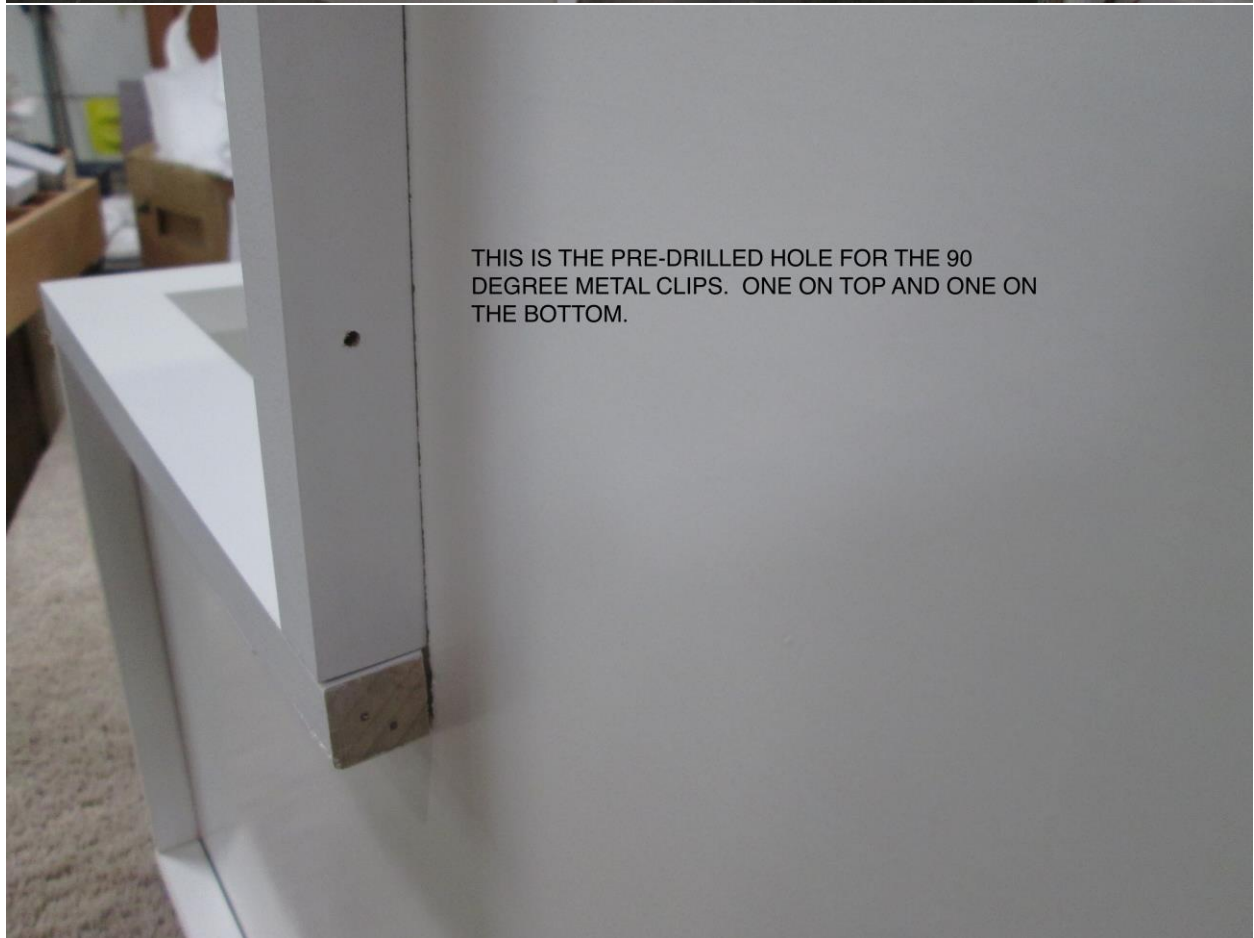

THIS IS THE PRE-DRILLED HOLE FOR THE 90 DEGREE METAL CLIPS. ONE ON TOP AND ONE ON THE BOTTOM.



1 OF 2 METAL CLIPS

PUT BOX AND FACE FRAME TOGETHER AND
SECURING IT BY THE 90 DEGREE METAL CLIP

ONE METAL CLIP GOES ON THE BOTTOM
ONE METAL CLIP GOES ON THE TOP



2ND METAL CLIP

THE METAL CLIP ATTACHES AND SECURES THE FACE FRAME AND CABINET BOX TOGETHER.



SECURE THE DOOR (DOOR TO FRAME) WITH THE SHORT SCREW AS SEEN IN THE PICTURE.



THIS IS A FINISHED ASSEMBLED WSQ cabinet

Please note: if further instruction is needed, the cabinet box assembly will be the same as the lazy susan (LS3612) base cabinet.