


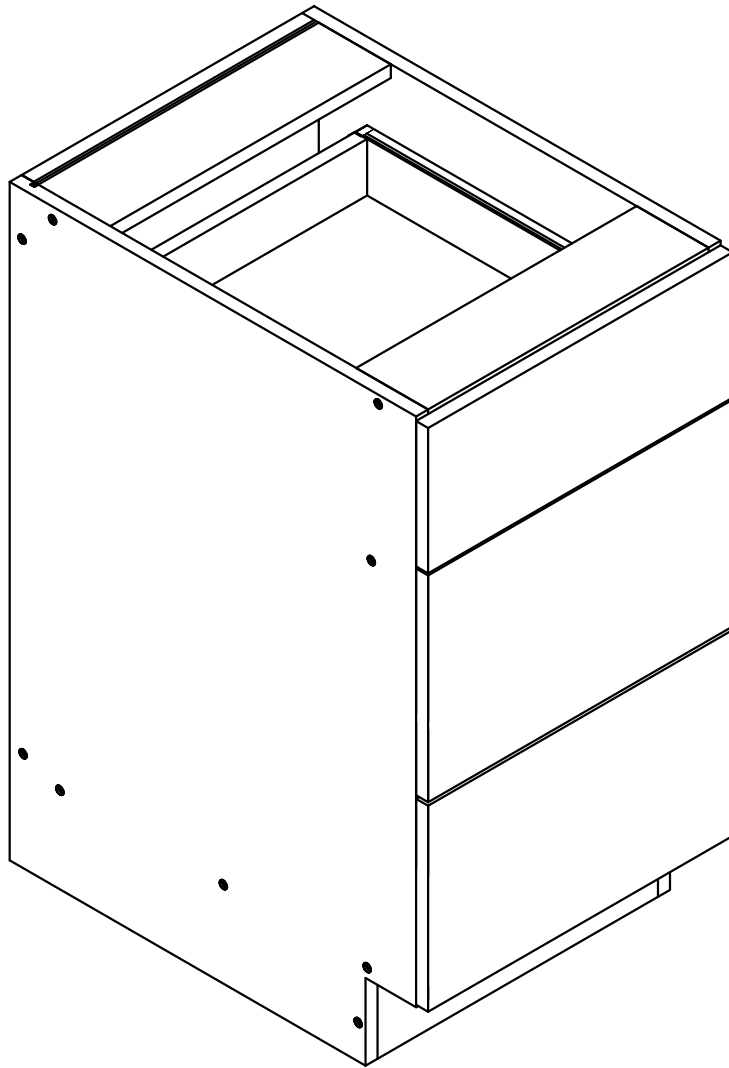
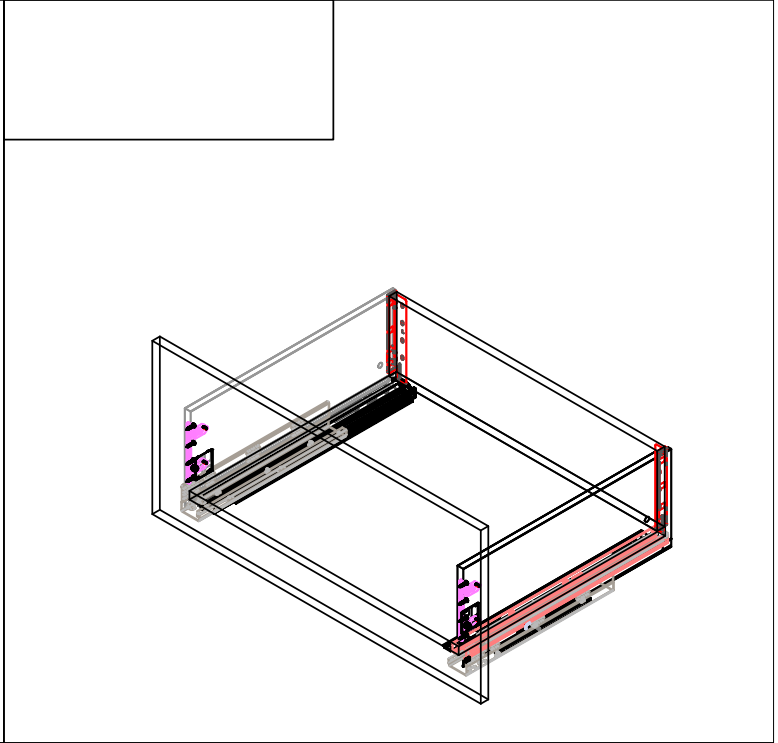
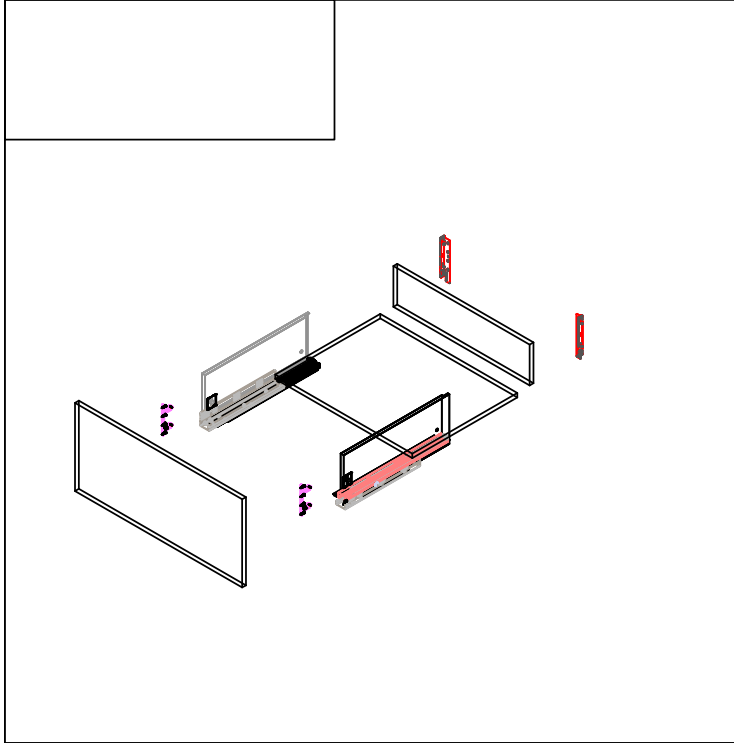


BASE CABINET ASSEMBLY INSTRUCTION

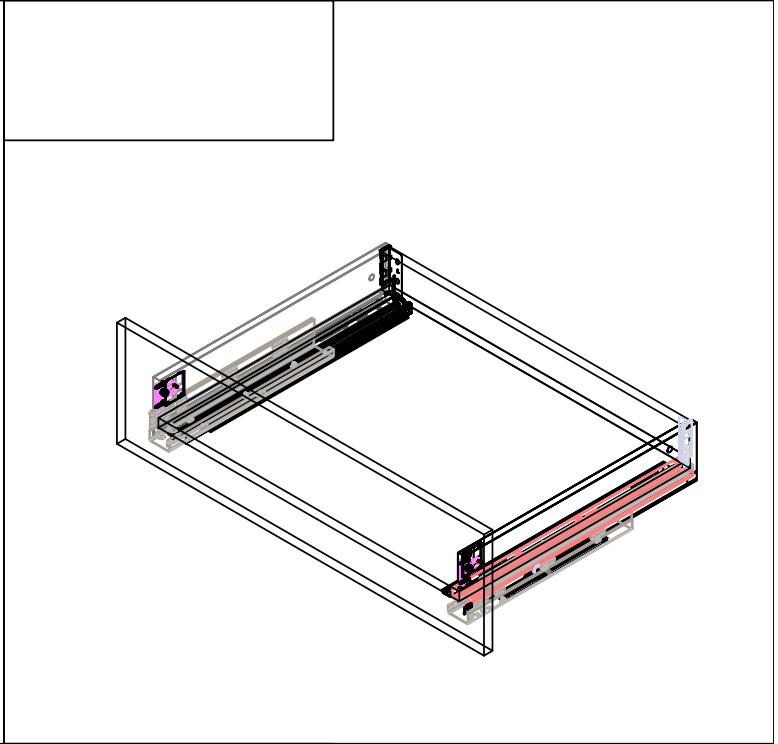


3DB12/VDB12	3DB27
3DB15/VDB15	3DB30
3DB18/VDB18	3DB33
3DB21/VDB21	3DB36
3DB24	

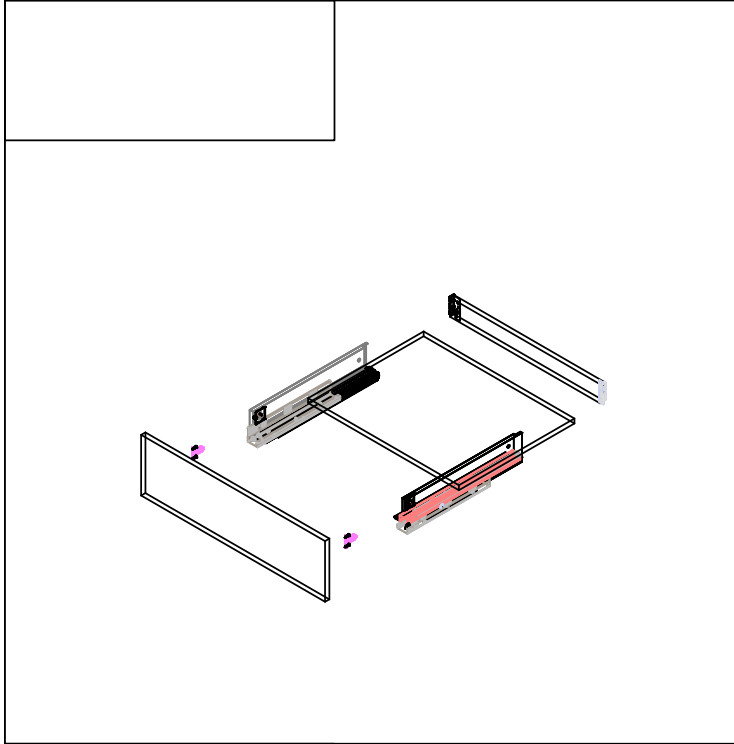


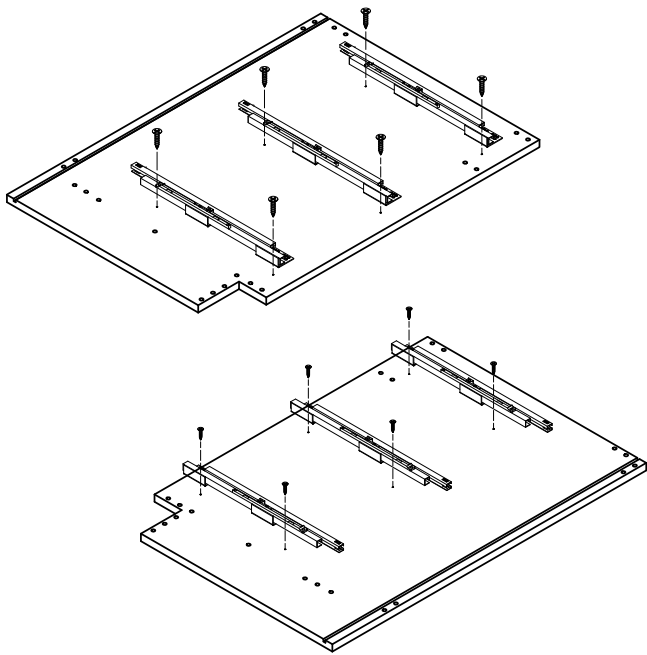

Step-1

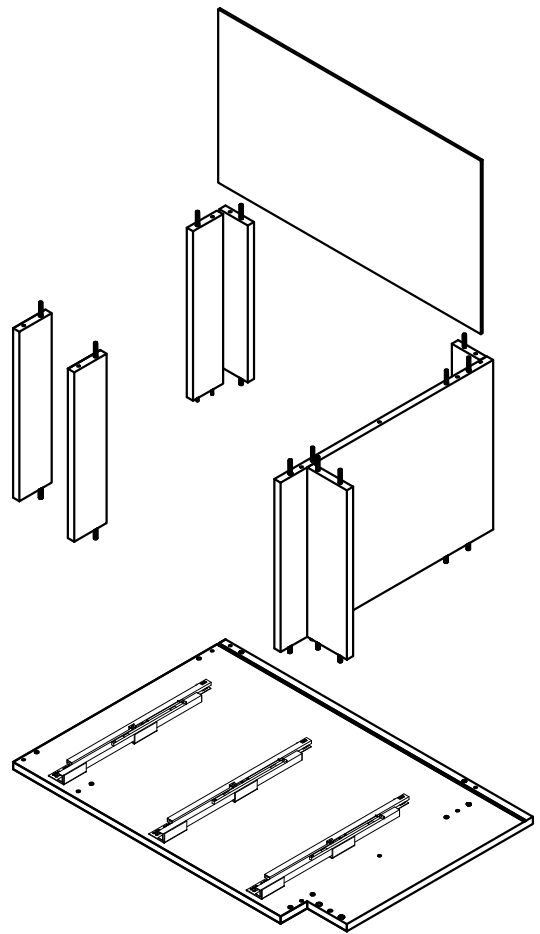


Step-2

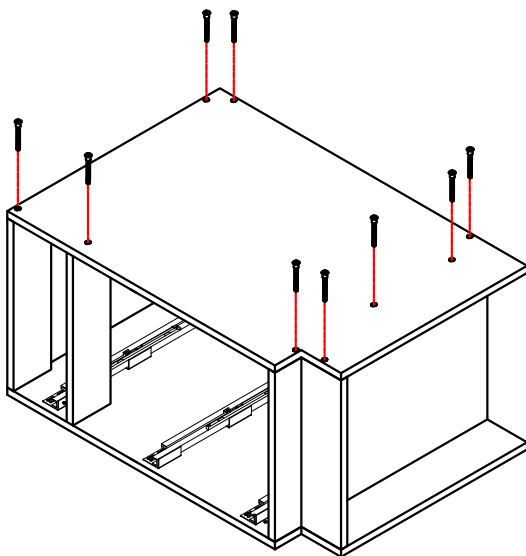

The other side panel is also assembled with the screw

Step-3

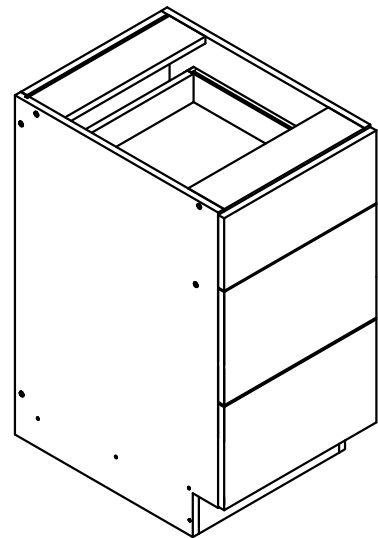

Step-4