


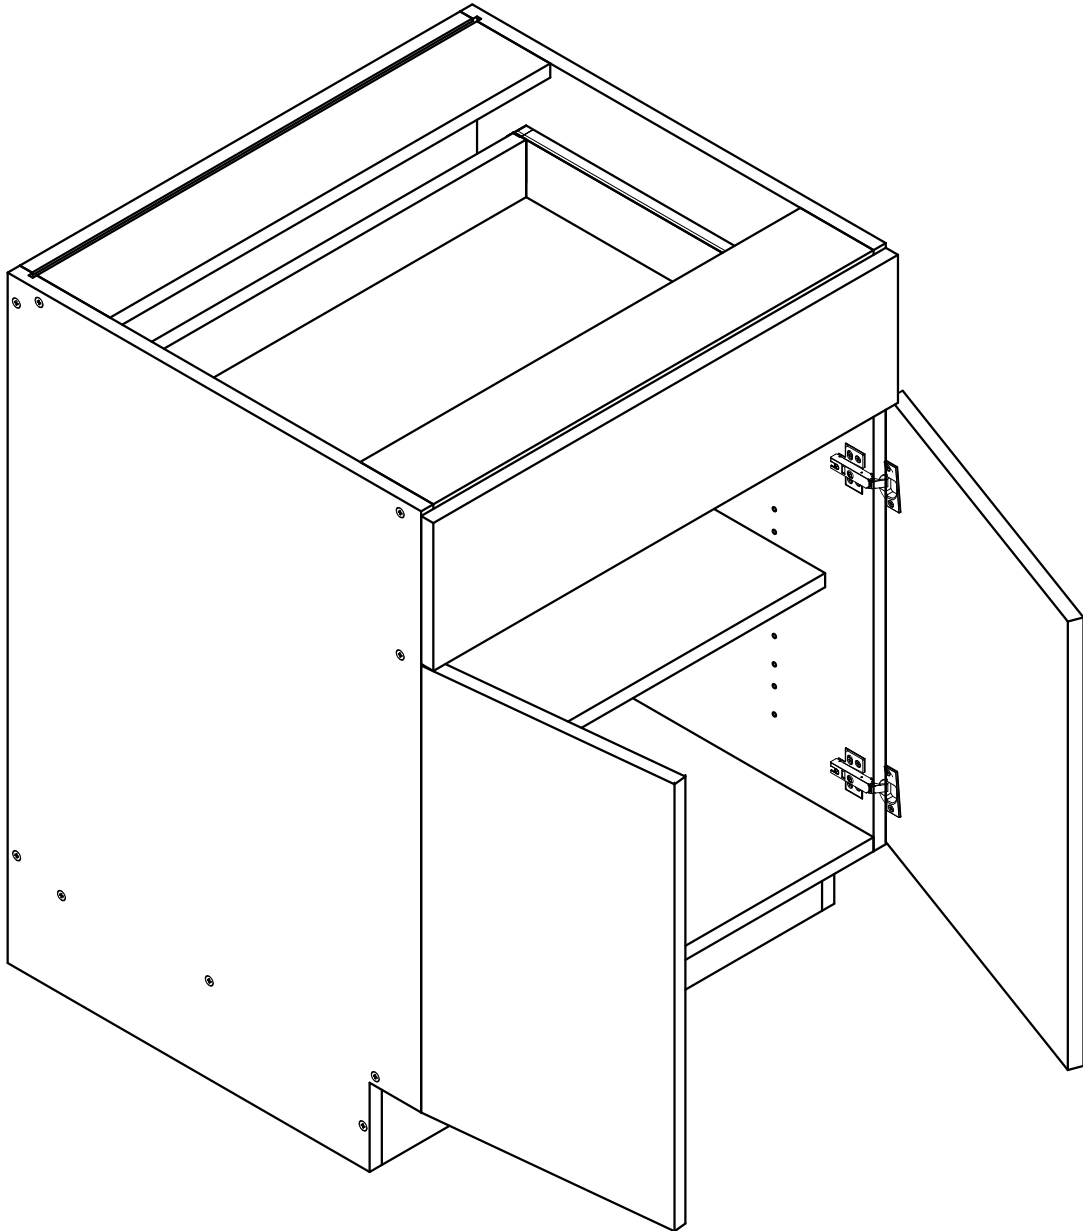


BASE CABINET ASSEMBLY INSTRUCTION

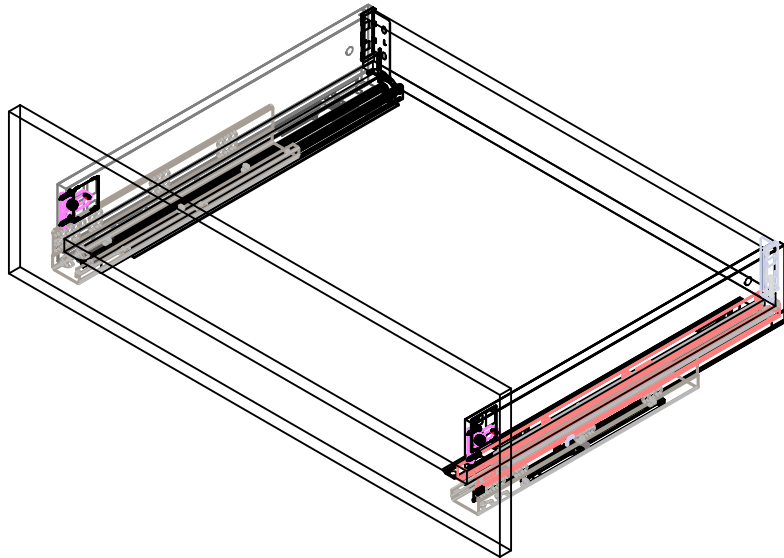


B24	B27
B30	B33
B36	

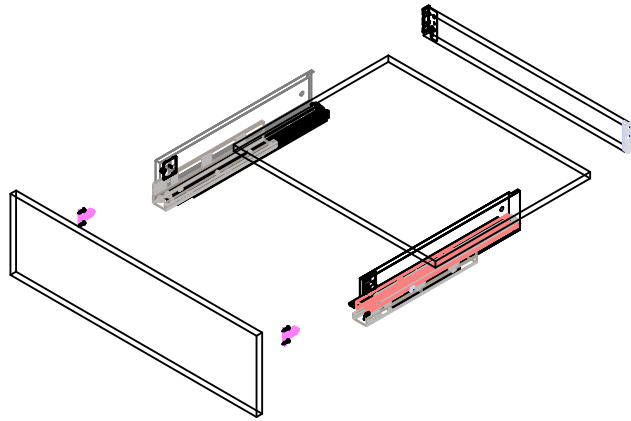


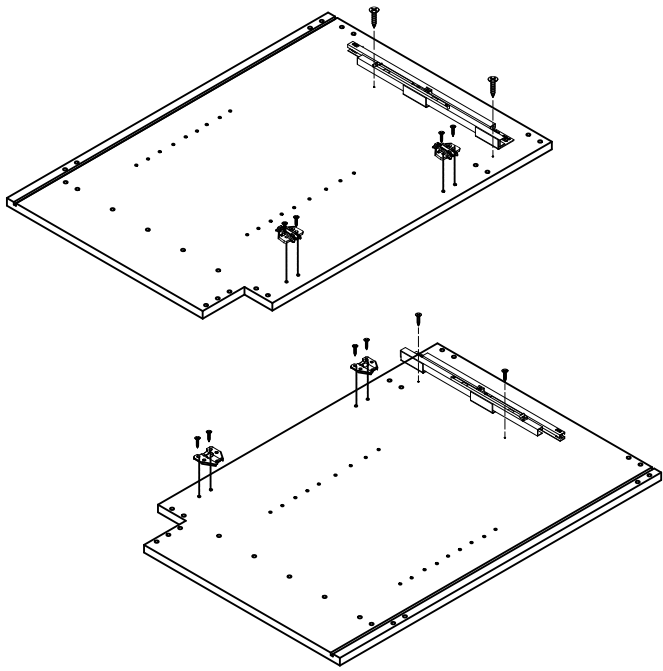

Step-1

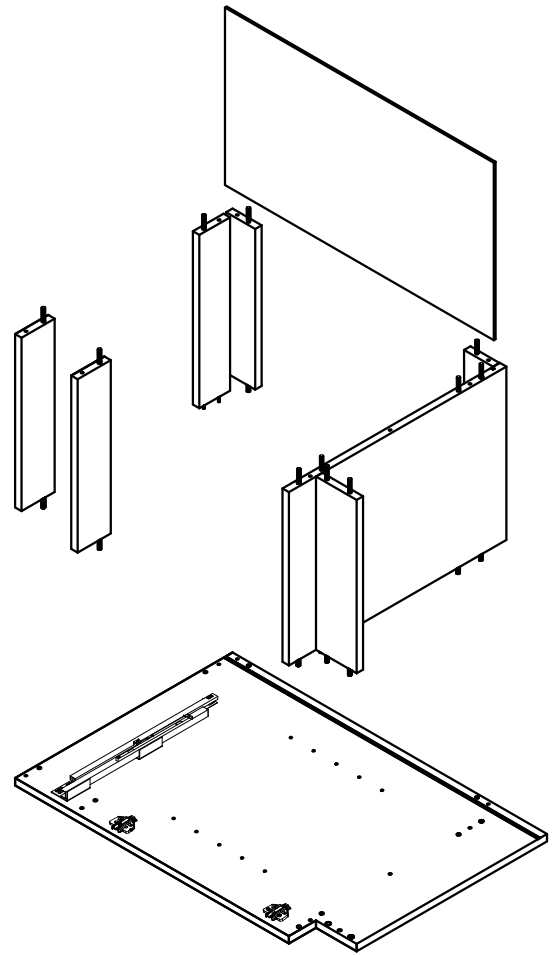


Step-2

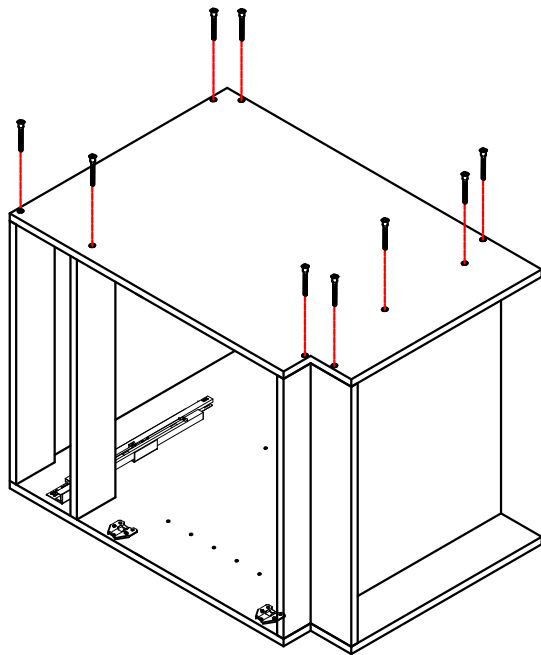

The other side panel is also assembled with screws

Step-3

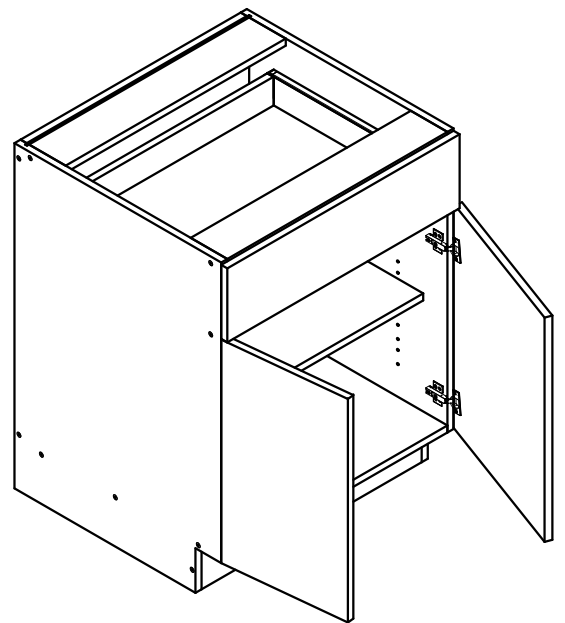

Step-4