


Blumotion Soft Close Installation

1. The soft close can be installed anywhere along the hinge side of the door but are typically installed right above or below one of the door hinges. Installing in the top corner of the cabinet ensures it's out of the way.



2. Hold the soft close in place with one hand so the curved part of the cartridge is sticking out towards the open cabinet door and the metal housing of the soft close is in line with the edge of the cabinet face frame (there is a small lip on the front of the soft close to line up with the cabinet edge). There is also an adjustment screw; this should be on the underside of the soft close once installed. Once in place, just screw into the side of the cabinet through the hole that is already in the soft close housing.

3. Use the adjustment screw on the underside of the soft close to adjust the tension based on a heavier or lighter door. Just tighten the screw to retract the cartridge (grey part inside the metal housing), or loosen it to have it stick out a little further.

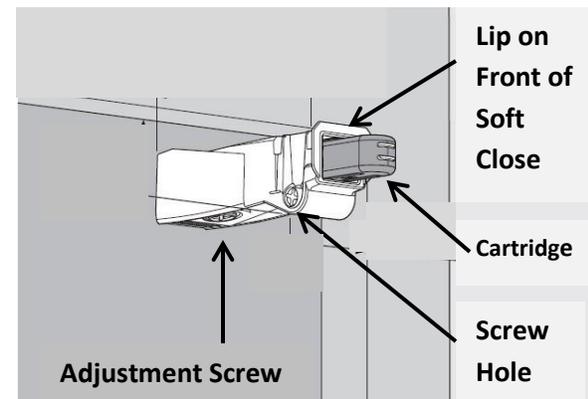

4. For Partial Overlay cabinets, you will also receive a spacer with the soft close. The spacer snaps onto the side of the adapter, for easier mounting. It ensures the adapter does not interfere with the partial overlay door. Make sure the spacer is on the hinge side of the cabinet when installing the soft close.

