




BASE CABINET ASSEMBLY INSTRUCTION

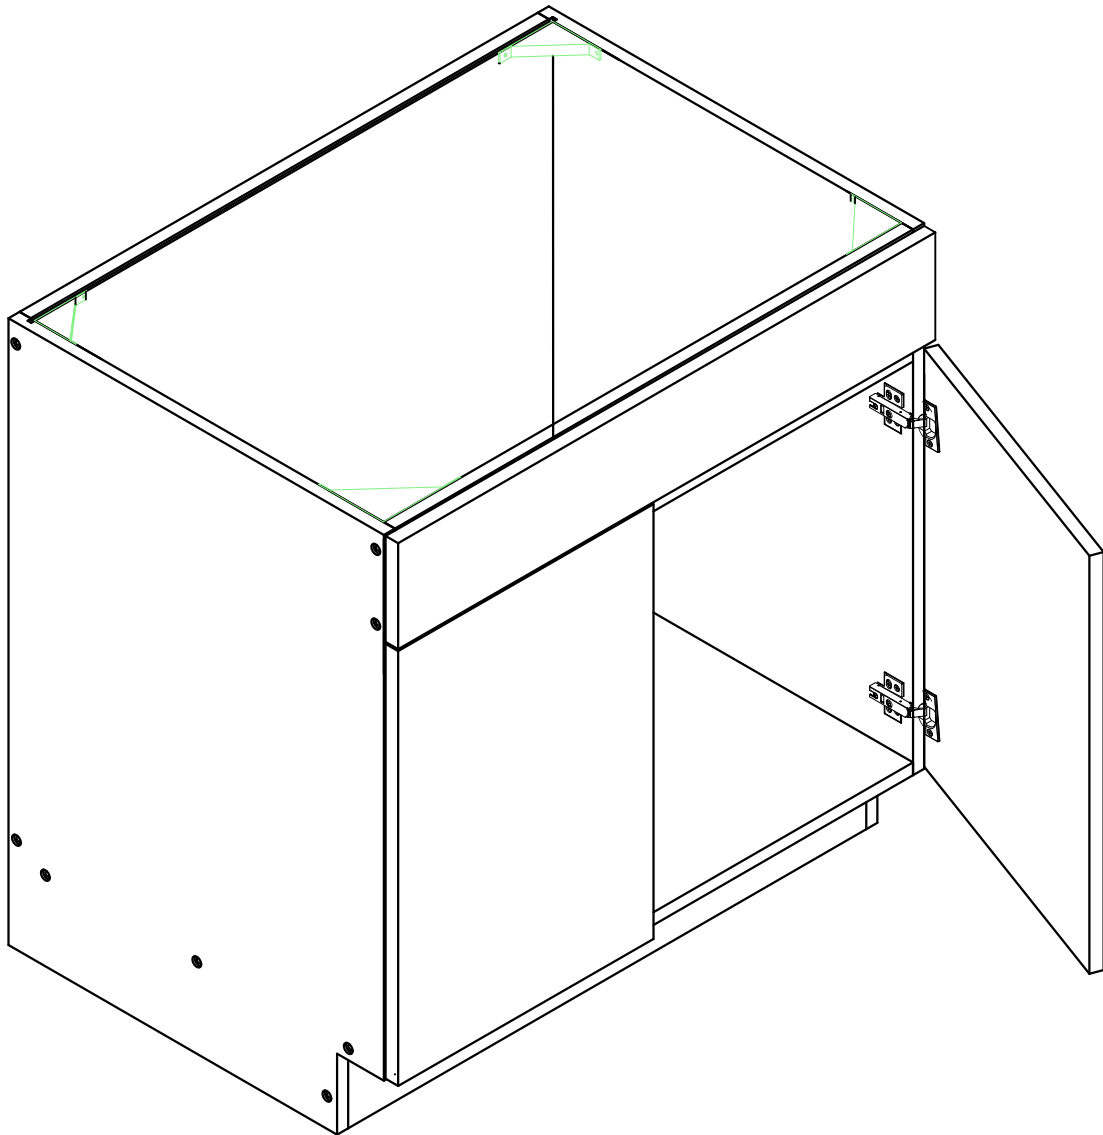


SB30	VSB24
SB33	VSB30
SB36	VSB36

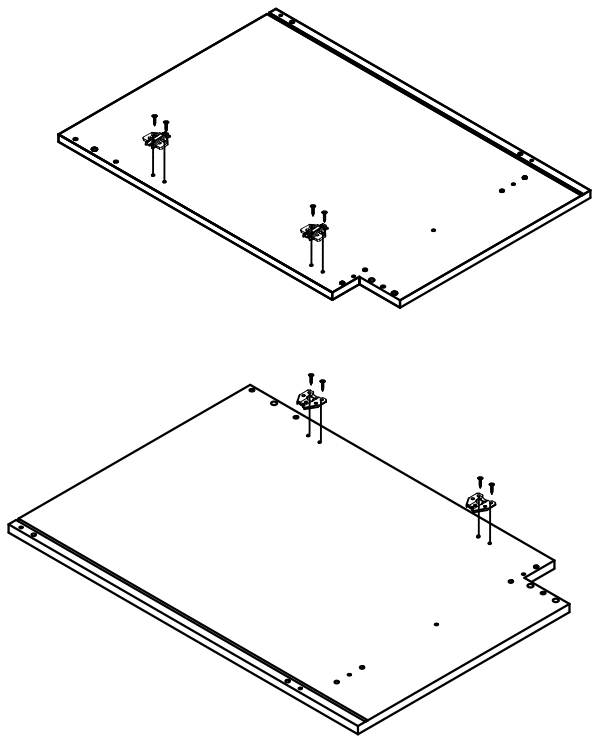

Step-1

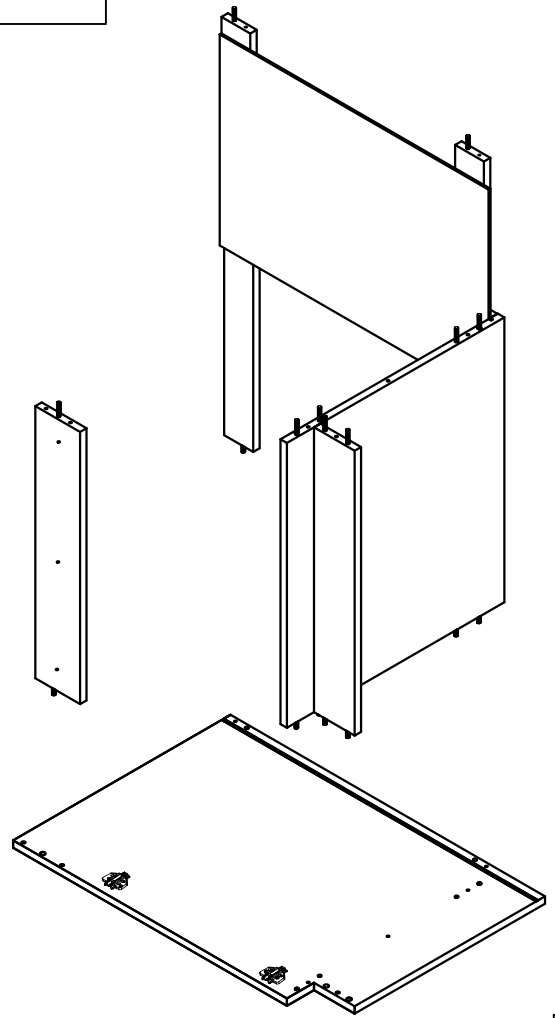


Step-2

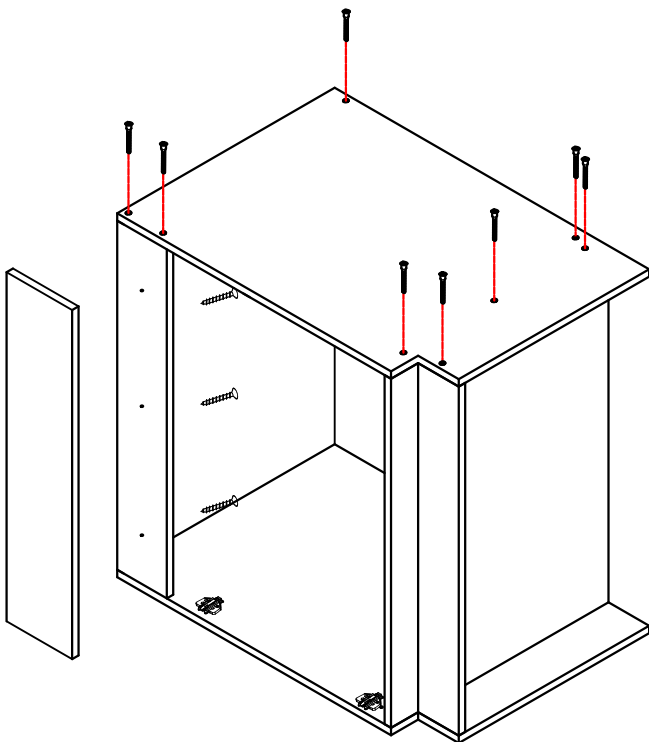

The other side panel is also assembled with the screw

Step-3

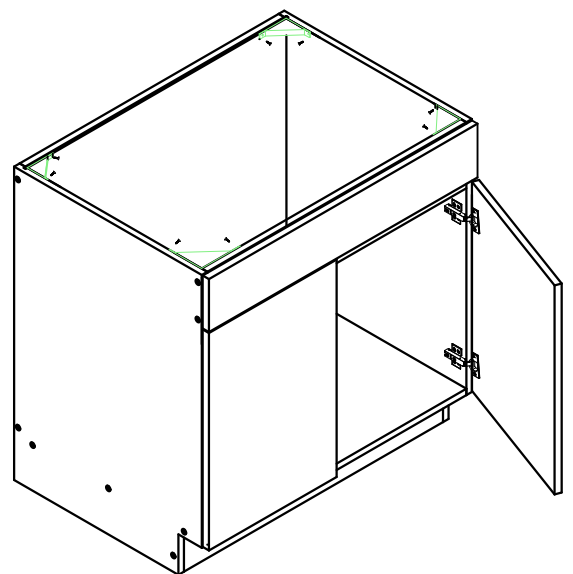

Step-4