VSD36,VSD42,VSD48 ASSEMBLY INSTUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the wood block on the top corner.

STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

PICTURE


QTY

12	HINGE PLATE	2	Hinge Plate
11	1 1/2" SOFTCLOSE HINGE	4	1 172 ruge
10	3/4" ROUND HEAD SCREW	4	3/4" round head screw
9	BUMPER	12	Bumper
8	DAMPER	2	Damper
7	1" ROUND HEAD SCREW	8	I" round head screw
6	Selfclose slider	2	Selector street
5	9/16"ROUND HEAD SCREW	44	9/16' round head acrew
4	CLEAT	11	Cleat
3	1"FLAT HEAD SCREW FOR CARCASS	5	1° flat nead screw
2	WOOD BLOCK	4	Wood block
1 *	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	1 flat head screw


Description


HARDWARE LIST

NO.

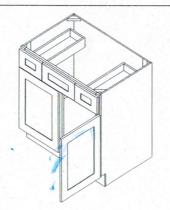


	PARTS LIST		
	NO.	Description	QTY
	Α	BACK PANEL	1
	В	SIDE PANEL	2
	С	TOP&BOTTOM PANEL	1
	D	TOE KICK	1
	E	FACE FRAME	1
	F	DRAWER BOX FRONT AND BACK	4
1	G	DRAWER BOX SIDE	4
	Н	DRAWER BOX BOTTOM	2
	- 1	DRAWER HEAD	2
	J	DRAWER HEAD	1
	K	CABINETS DOOR	2










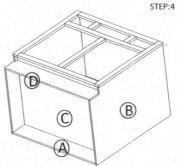

STEP:7

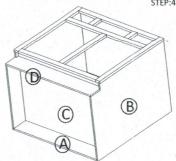

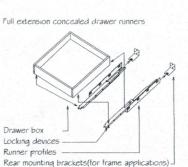



STEP:5

B

(A)

