


# WALL CABINET ASSEMBLY INSTRUCTION

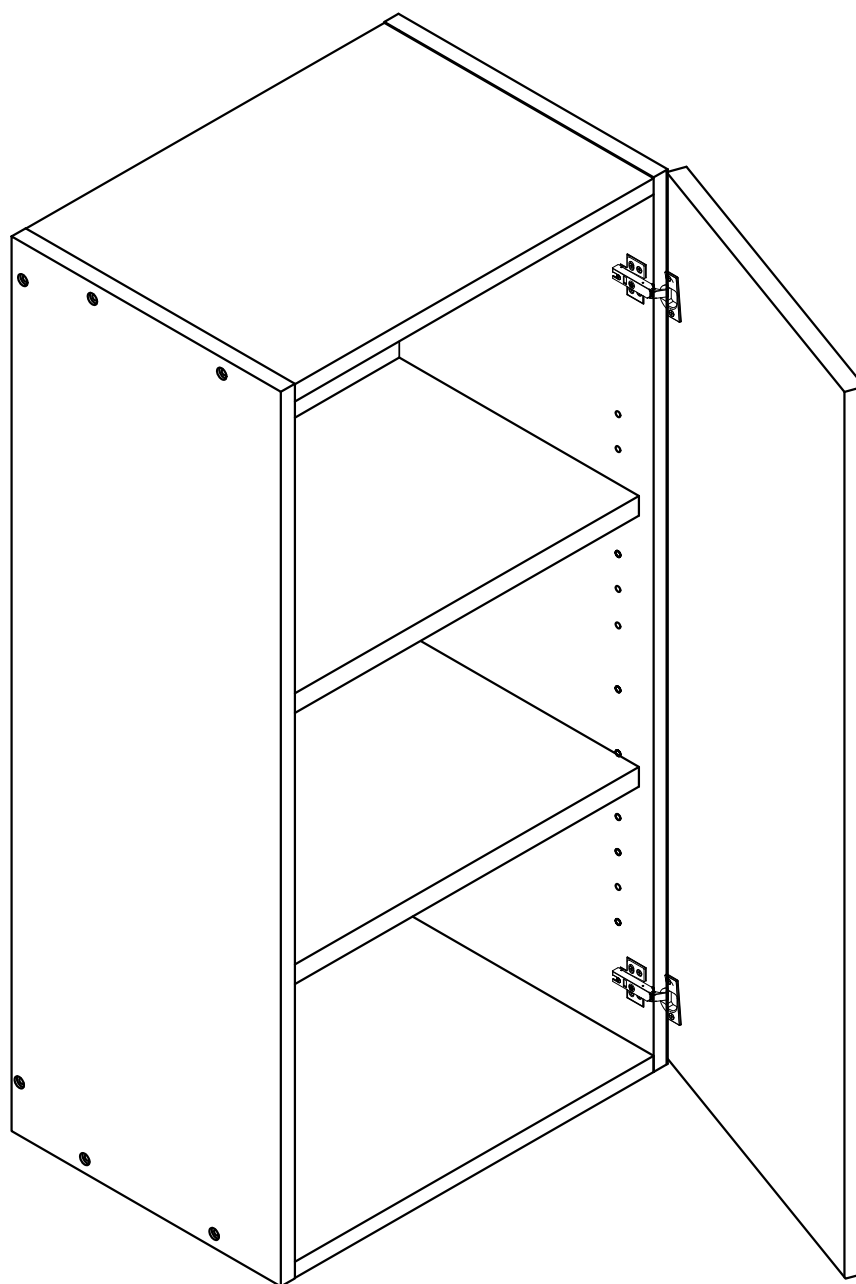


W0930

W1230


W1530

W1830


W2130

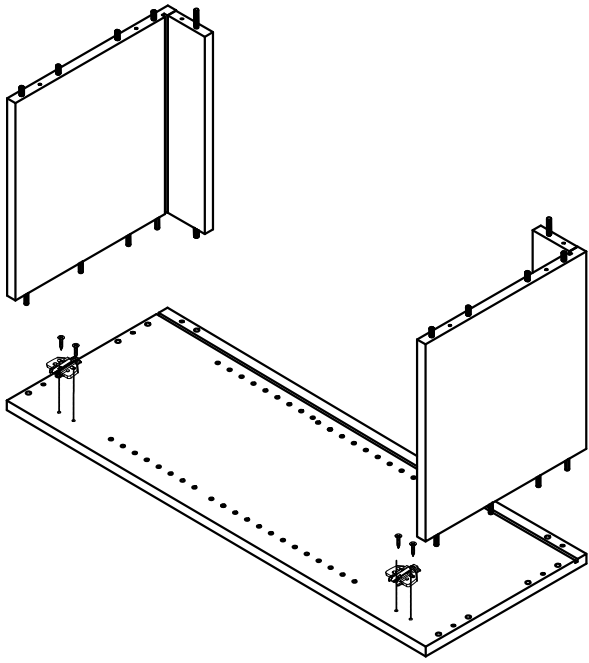


Step-1

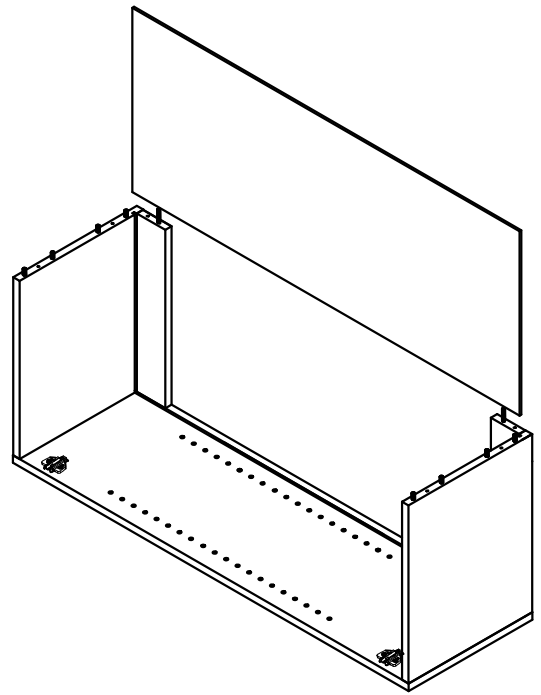

Step-2

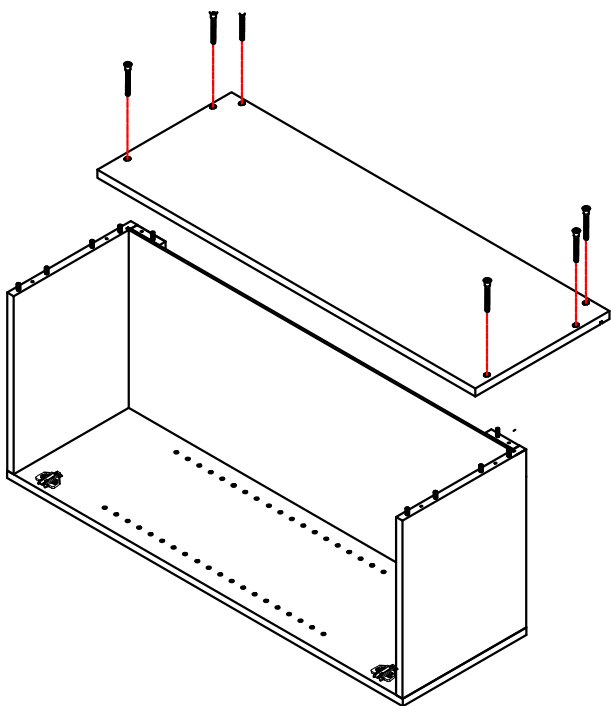

Step-3

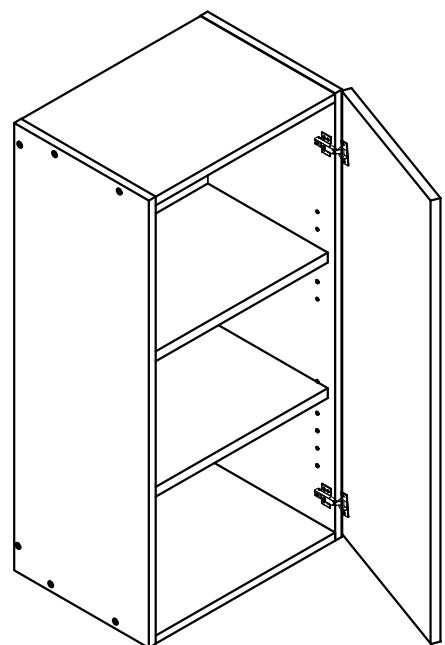

Step-4