


WALL CABINET ASSEMBLY INSTRUCTION

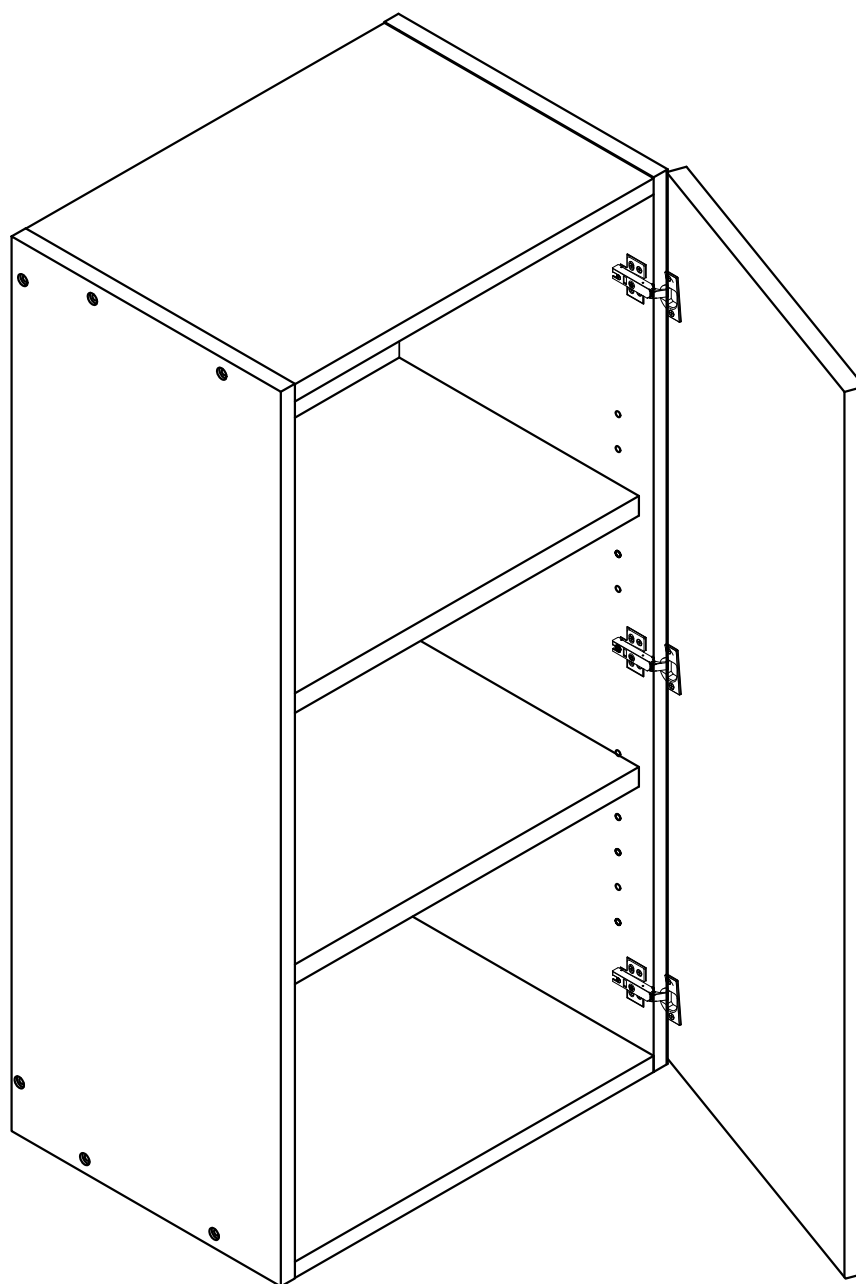


W0936

W1236


W1536

W1836


W2136

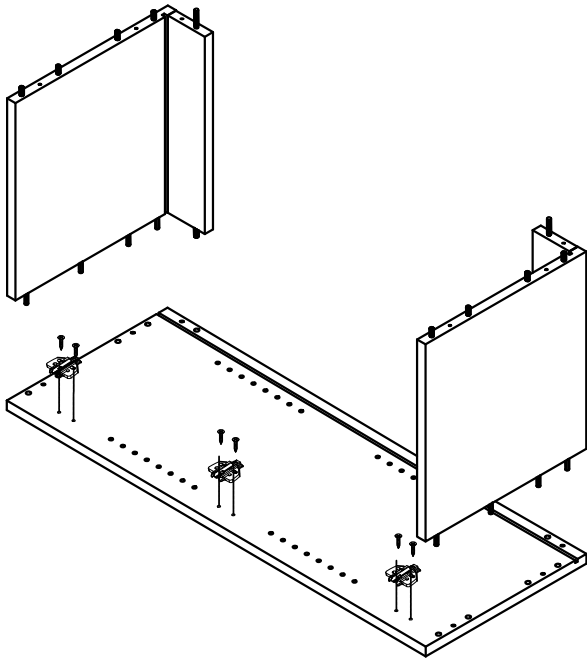


Step-1

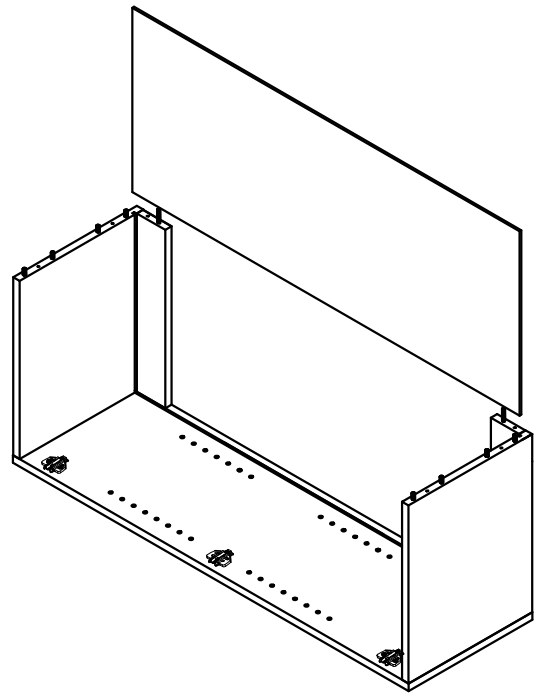

Step-2

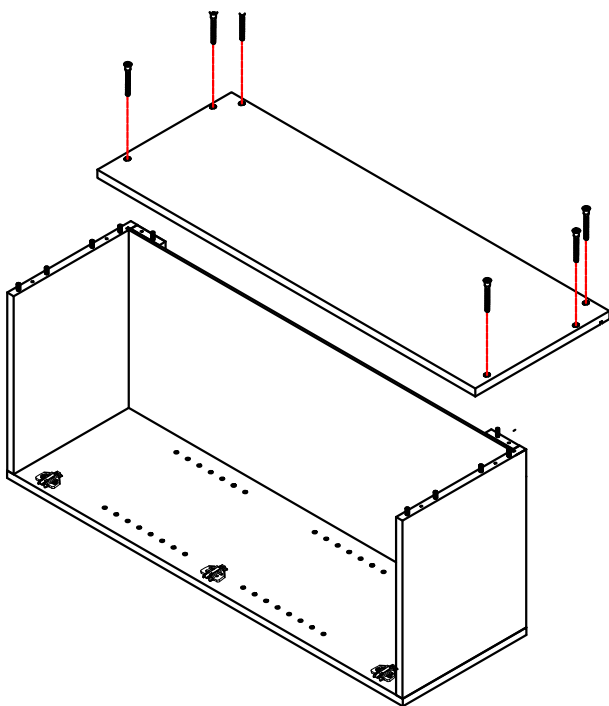

Step-3

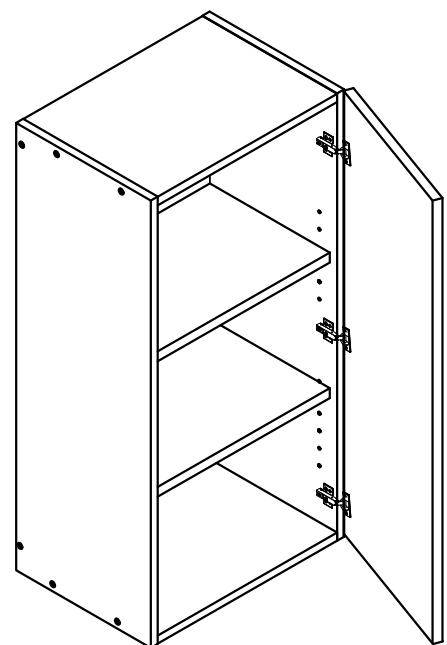

Step-4