



# WALL PANTRY / TALL CABINET ASSEMBLY INSTRUCTION

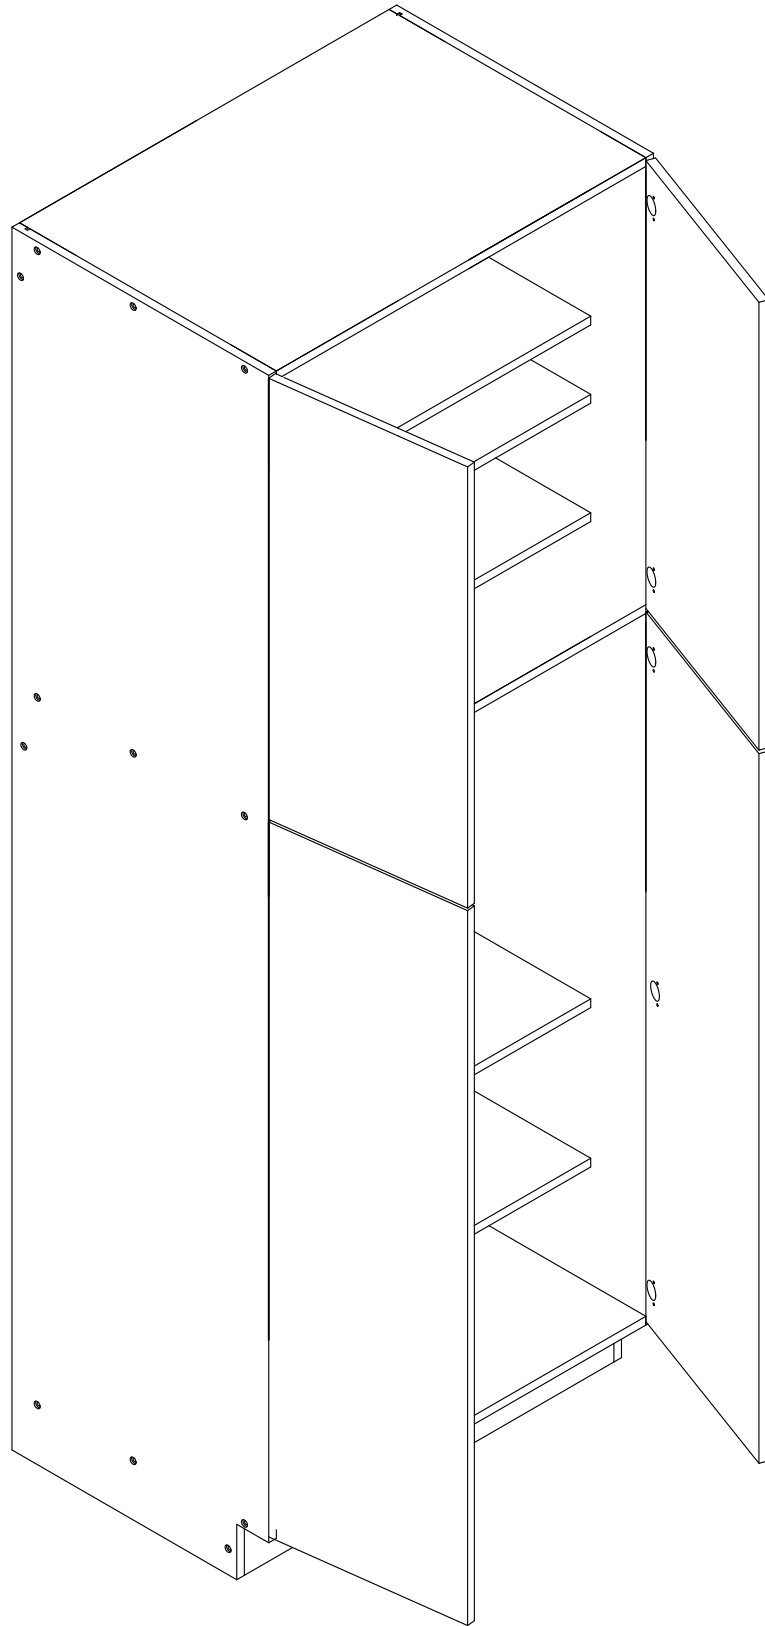


WP2496


WP3096

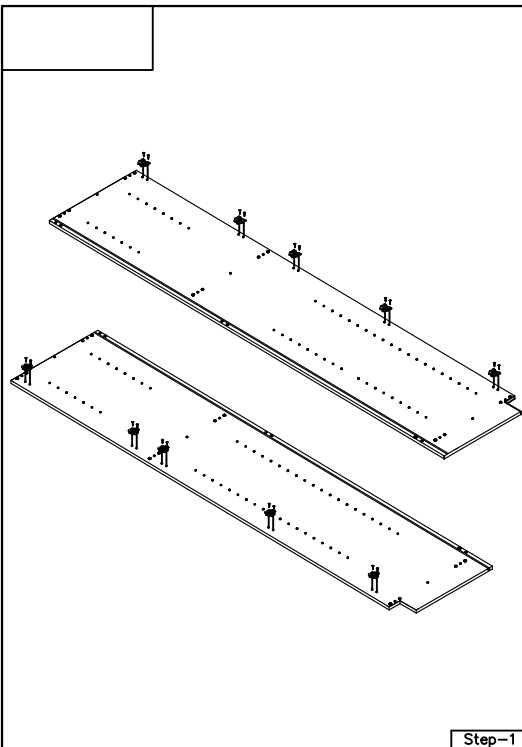


Step-1

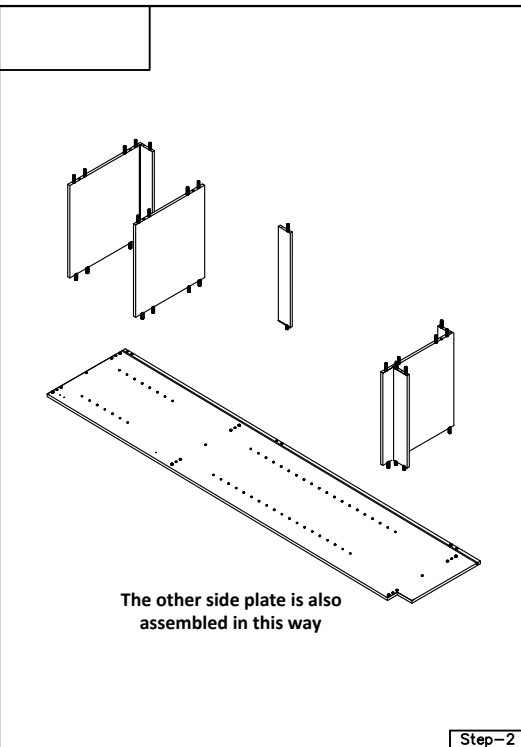


Step-2

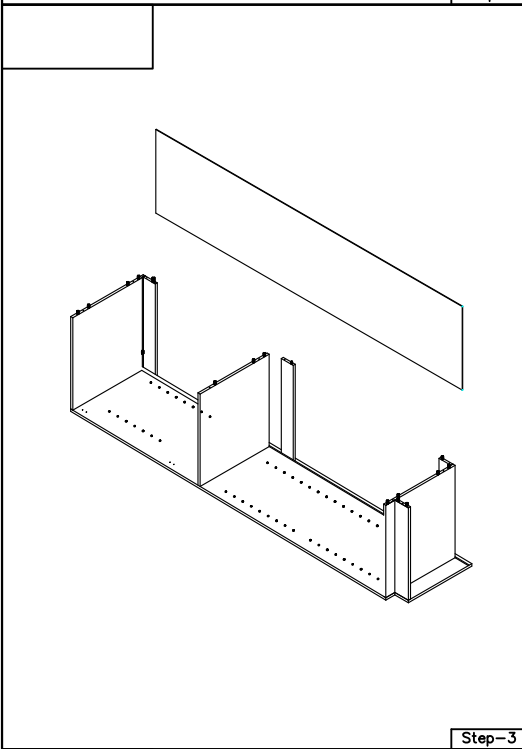

Step-3

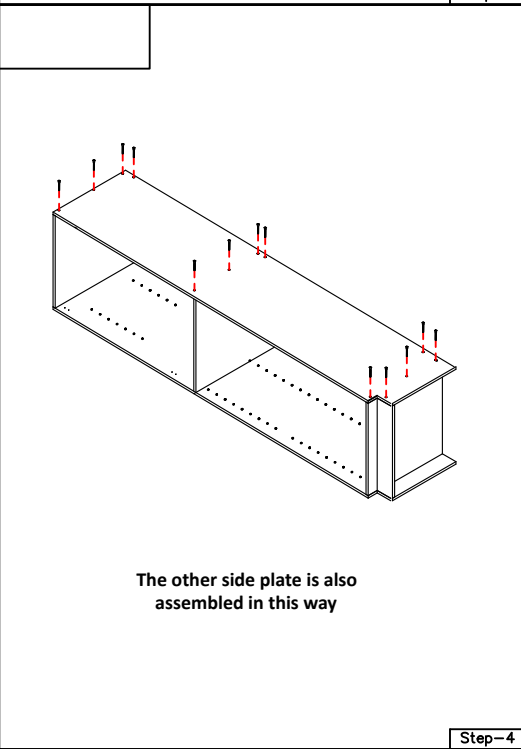

Step-4

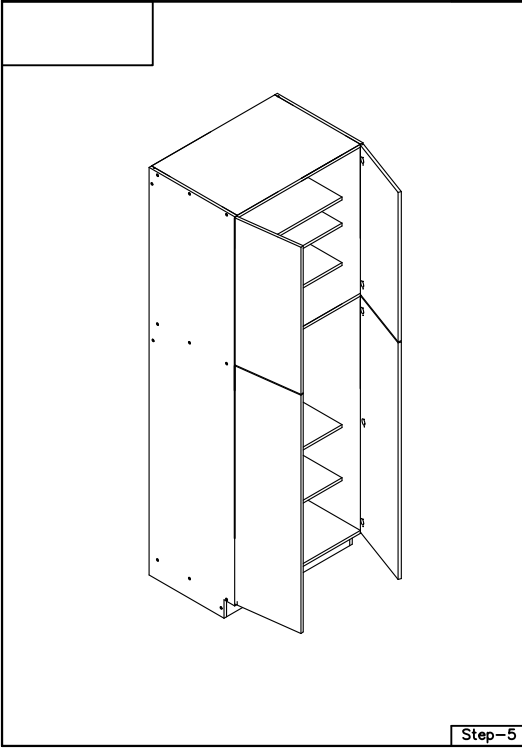

Step-5