


1 3/4" Wood Screws are the longest included screws. They are used in the pre-drilled holes on the back panel.



Use the 5/8" round-head screws with all angled assembly brackets



1" Wood Screws are included in some corner cabinets. These are used to assemble angled face frames. They are also used in pocket holes to attach side panels to face frames.

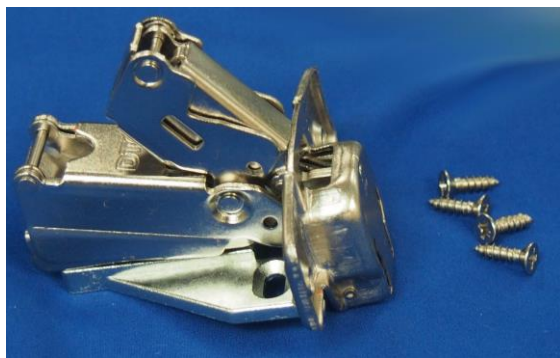

Hinges, plastic drawer glide supports and drawer glides are all attached with 5/8" flat-headed wood screws



5/8" flat-headed wood screws are also used with the brass top-corner brackets