


# Pullout Drawer Installation Guide

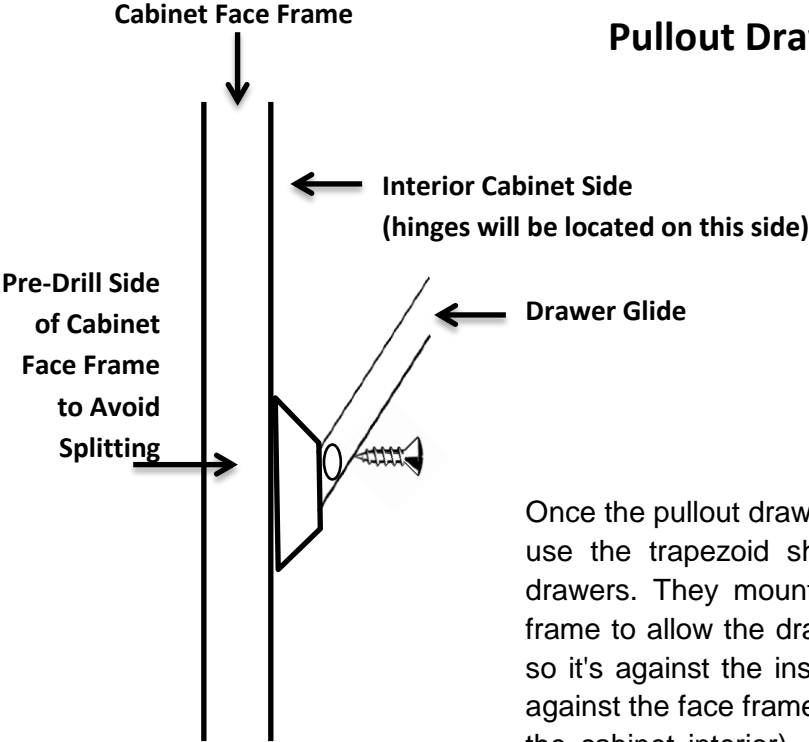

Once the pullout drawer is assembled, to attach it to the cabinet, use the trapezoid shaped wedge spacers included with the drawers. They mount to the hinge side of the cabinet's face frame to allow the drawer to clear the door. Line the wedge up so it's against the inside of the cabinet's face frame (long side against the face frame and short side facing the opposite side of the cabinet interior). Line the drawer glide up with the wedge and insert a screw through the drawer glide and the wedge, into the side of the cabinet's face frame. **It is highly recommended to pre-drill the cabinet to avoid splitting the wood.**